
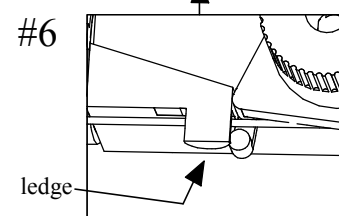
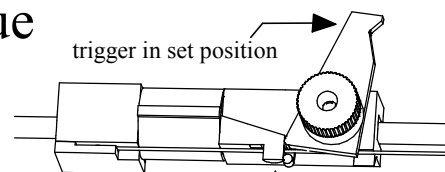
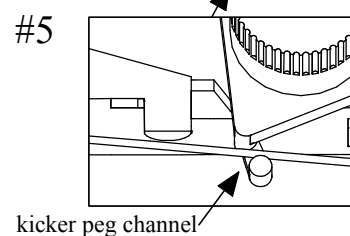
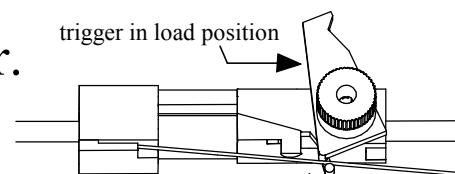
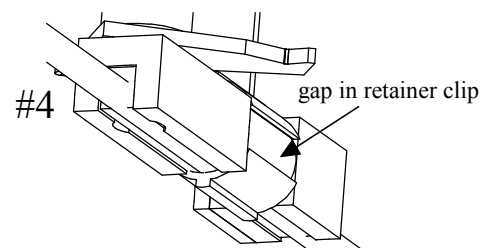
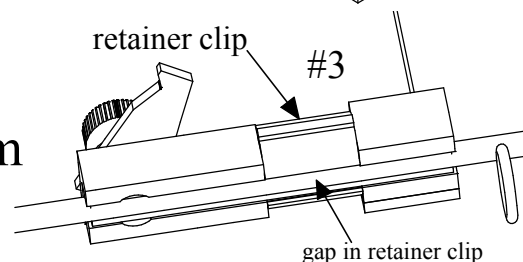
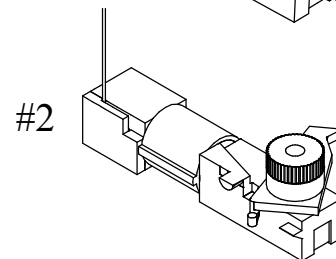



# INSTRUCTIONS

## Setting Procedure:

1. Loosen the sensitivity control (orange nut) and rotate the trigger to the position shown in diagram #1.
2. Remove flag wire from underneath the kicker peg of the trigger allowing the flag to the vertical position. (dia. #2)
3. Align the opening in the retainer clip with the foam-filled channel in the bottom of the Firststrike™ indicator. (dia. #3)  
Place the Firststrike™ indicator behind at least the 2nd eyelet from the rod tip and in a position where indicator attaches firmly to the rod. With the trigger end of the unit closest to the reel, firmly seat the rod against the neoprene within the channel on the underside of the Firststrike™ indicator.
4. Turn the retainer clip 90° (one quarter turn) to lock the Firststrike™ indicator onto the rod. (dia. #4)
5. With the trigger rotated to the load position, guide the flag wire down and place within the kicker peg channel (dia. #5), then continue to rotate the trigger clockwise into the set position (dia. 6). The flag wire should now be securely trapped under the ledge with the kicker peg completely seated within its pocket. Adjust the sensitivity control to the desired setting based upon fishing conditions.

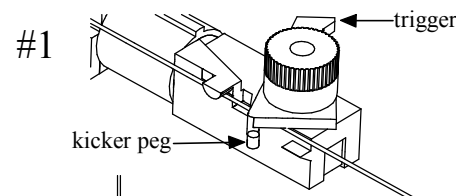




6. Pinch the line between the two eyelets located immediately in front of the Firststrike™ indicator. Pull back the line and hook it in the notch in the trigger. (dia.#7)

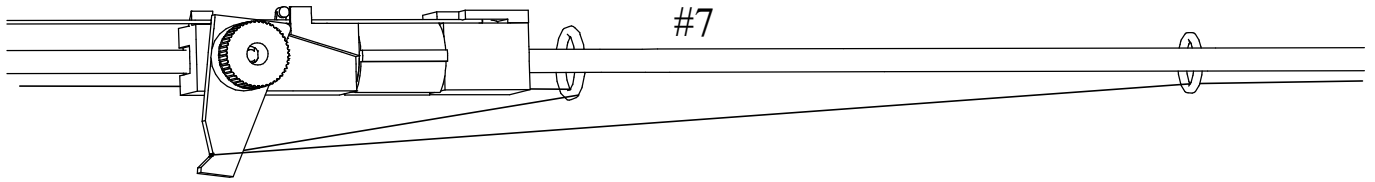

**For best results, adjust the sensitivity control to allow the trigger to move as freely as possible without causing unintentional flag trips.**

## **Storing Procedure:**

1. With the flag in the vertical position, rotate the trigger to the position shown in diagram #8.
2. Guide the flag wire down and place behind the kicker peg underneath the trigger. (dia.#9)
3. Rotate the trigger completely into the storage position. Snug the sensitivity control to prevent the trigger from rotating. The flag wire should now be securely locked against the body of the Firststrike™ indicator. (dia.#10)

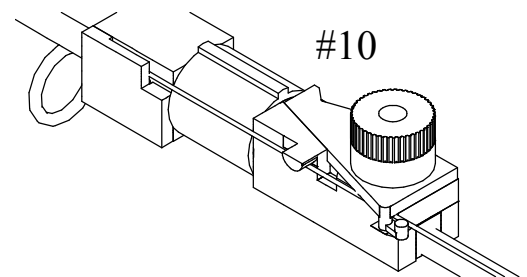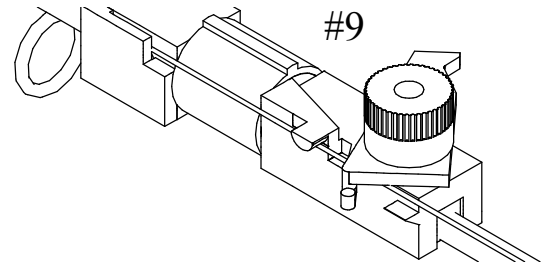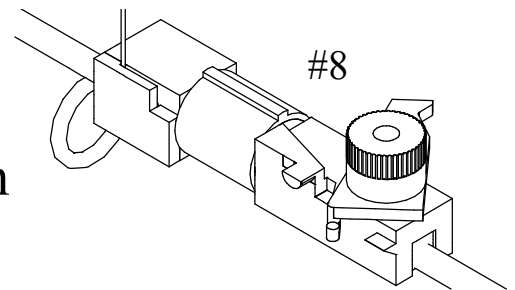

For additional tips & tricks, visit us on the world wide web at:

**[www.firstrikefishing.com](http://www.firstrikefishing.com)**

**WARNING:**

- Keep out of reach of small children. Device contains small parts if disassembled.
- Use only as directed.